


CUTTING INLETS WITH A ROTOZIP®

1. Refer to table of hole sizes on reverse for proper size for your application.
2. Determine the center of the hole to be cut; drill a pilot hole from the inside of the manhole for proper location of RotoZip® bit.
3. Choose the correct bit and cut the needed hole.
4. Insert the gasket, then stab the pipe through the gasket to the depth desired.

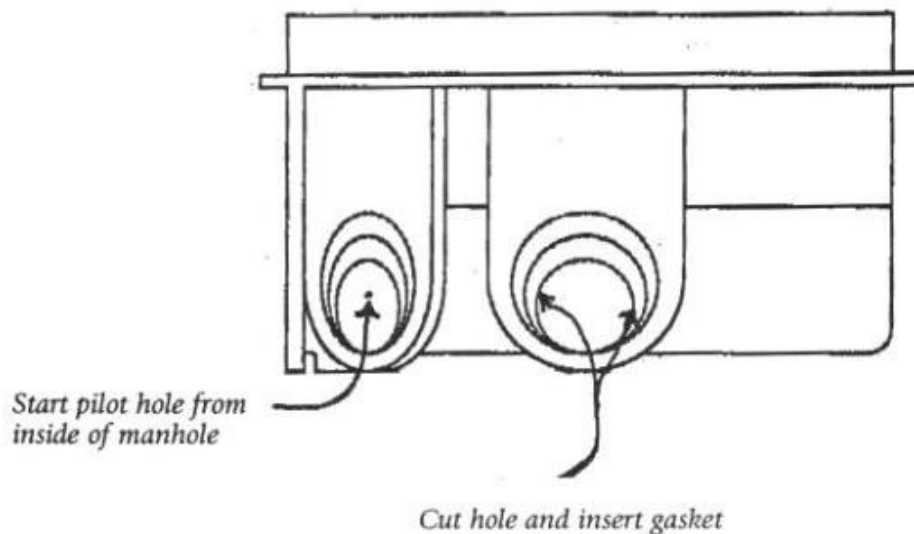

SALES OFFICE

93789 Carlisle Lane
Coos Bay, OR 97420
1-877-857-4817 Toll Free
1-541-269-9964 Direct
1-541-269-9966 Fax

WEBSITE

www.rhinousaoforegon.com
E-Mail
sales@rhinousaoforegon.com
techinfo@rhinousaoforegon.com

YOUR DEALER